

## Lucent LED Operatory Light Quick Reference Installation Guide

## **ASSEMBLING THE HEAD TO THE ARM**

Remove adaptor
Bushing

Attach bushing to light head




## **ELECTRICAL CONNECTIONS**

Connect wire harness

Secure light head to arm



## **Light Handles**

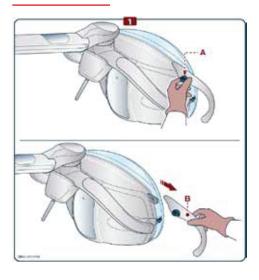

Switch on / off / Adjustment

- To switch the lamp On and Off, press and release the switch to the LEFT or RIGHT side. When the lamp is switched On / Off, the device will beep (once). DON'T push and pull the switch. It only moves in a left and right direction.

Right & Left Light handle



Light switch toggle extension

Light shield wrench

Light bushing pre installed into arm.

Signature\_

Date